



the **stair** makeover solutions company

how to install
stair make-over stair cladding
laminare range

on stairs with curved bottom
treads



STAIR
MAKE-OVER

That's easy

 laminate and real wood flooring solutions for stairs



transform your staircase in a day

simply clad your existing staircase with our premium laminate or real oak veneer treads and risers to create a stunning feature staircase in your home

this is one of a series of how to brochures which cover all aspects of installing stair make-over stair cladding all of which are available to download from our website

www.stairmakeoversolutions.co.uk



how to install stair make-over stair cladding laminate on stairs with curved bottom treads

this how to install stair make-over stair cladding laminate range on stairs with curved bottom treads is a supplement to and should be read in conjunction with our stair make-over general installation guide which can be downloaded from our web site www.stairmakeoversolutions.co.uk

stair makeover stair cladding laminate range carries a heavy domestic / general commercial rating it's durable, hygienic easy to clean and virtually maintenance free, specially developed to make taking laminate upstairs easy, practical and affordable stair make-over will look as good as new for years to come and is suitable for almost any style and layout of wooden, concrete or metal staircase



important

we have taken every care in writing and producing this how to guide but can not accept any responsibility for it's appropriateness in individual circumstances and if you have any doubts at all please do not undertake your project without first consulting a qualified trades person.

only stair make-over adhesive and sealant should be used and applied as directed

there are potential safety issues if stair make-over is fitted incorrectly and you should be sure of your ability to complete the project safely before undertaking any work.

if in any doubt whatsoever consult a qualified trades person before undertaking any work

how to install stair make-over laminate treads and risers on stairs with curved bottom treads

you will need



tape measure

masking tape



marker pen
pencil & square



saws
fine tooth handsaw
or jigsaw with
down cut blade
and a hacksaw

cartridge applicator gun



water spray bottle

always wear the appropriate safety clothing and take care when working with any tools





how to install stair make-over on stairs with curved bottom treads

how to install stair make-over laminate treads and risers on stairs with curved bottom treads

handy hints

too hot to handle!

to avoid damaging the iron-on edging use an iron set to "Wool" (medium heat) with any steam function turned off.



apply firm pressure whilst moving the iron backwards and forwards until the heat activated adhesive melts and then allow to cool fully

Oops! make sure the soleplate of your iron is clean before using to iron clothes again

always wear the appropriate safety clothing and take care when working with any tools




STAIR
MAKE-OVER

That's easy


at the heart of the stair make-over laminate flooring for stairs system is the one piece bull nose tread and so to install stair-makeover on stairs with a curved bottom tread we suggest that the stair is squared off in keeping with the sleek, modern look created by installing stair make-over and all the materials required to achieve this are supplied as standard when you purchase our treads and risers

the risers

step 1 square off the riser - mark a line on the floor squaring off the riser and letter the two sides as shown A & B

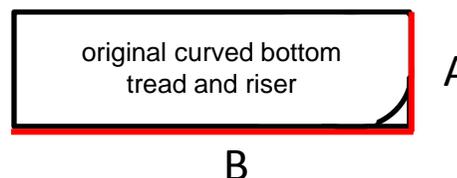

step 2 measure side A (this is the width of your new side riser) measure side B and add 8mm (the front riser will cover the end of the side riser and sit in front of it)

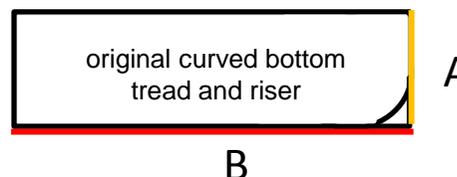

step 3 transfer the measurements onto a riser/s and cut to size iron some matching edging onto the exposed end of riser B (supplied as standard with treads and risers)




the risers are now ready to glue in place once all the treads and risers for the complete staircase have been cut to size and numbered as shown in the stair make-over laminate flooring for stairs general installation guide




how to install stair make-over on stairs with curved bottom treads

the tread

step 1 measure across the top of the existing tread with the curved end to its widest point and add 25mm (this will be the width of your new bottom tread)

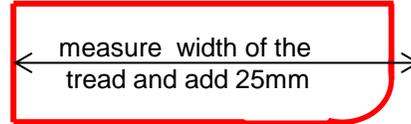

step 2 measure the depth of your tread and mark out any cut outs required e.g. around newel posts etc and then transfer the measurements to a tread and cut to the size and shape required

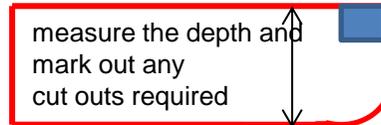

step 3 cut a piece of the 22mm plain mdf profile supplied to the depth of the exposed end of the tread – apply some glue and gently clamp in place (wipe off any excess glue with a damp cloth) and allow to dry fully before sanding to provide a key for the edging strip then simply iron on a piece of the colour matched edging strip supplied with the treads

Step 4 taking care use a very sharp craft knife or chisel to carefully remove excess edging before sanding to a clean finish



the tread is now ready to glue in place once all the treads and risers for the complete staircase have been cut to size and numbered as shown in the stair make-over laminate flooring for stairs general installation guide

how to install stair make-over laminate treads and risers on stairs with curved bottom treads

handy hints

too hot to handle!

to avoid damaging the iron-on edging use an iron set to “Wool” (medium heat) with any steam function turned off.



apply firm pressure whilst moving the iron backwards and forwards until the heat activated adhesive melts and then allow to cool fully

Oops! make sure the soleplate of your iron is clean before using to iron clothes again

always wear the appropriate safety clothing and take care when working with any tools



STAIR
MAKE-OVER

That's easy

contact us

If you have a question on any aspect of planning stair make-over , please contact us we would love to hear from you

e mail

sales@stairmakeoversolutions.co.uk

phone

+44 (0) 1507 474408 answerphone may be in use but please leave a message we will call you back



the stair makeover solutions company is registered in england and wales registration number 8540290
registered office argyll house, 158 richmond park road, bournemouth BH8 8TW